MIDMARK®

Installation Instructions

002-0481-00 PODIATRY CONTROL BOARD KIT WITH SUPPRESSOR
Used on Models 414, 416, and 417 Exam Tables

KIT COMPONENTS

Part Number	Description	Qty.
015-1253-00	Suppression Core	1
015-0720-00	Control Board	1
003-0943-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Screwdriver
5/16” Nut Driver

INTRODUCTION

NOTE
The suppression core is to help reduce interference that may be generated from radio frequencies.
If a suppression core is already installed you only need to replace board.

1

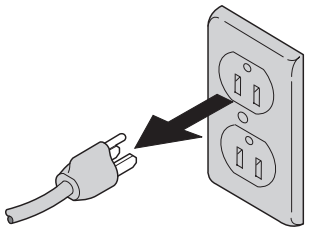
MA42000a

NOTE
If possible, run BACK all the way UP before unplugging table power cord.

DANGER
Unplug chair from electrical outlet. Failure to comply could result in serious injury or death.

2

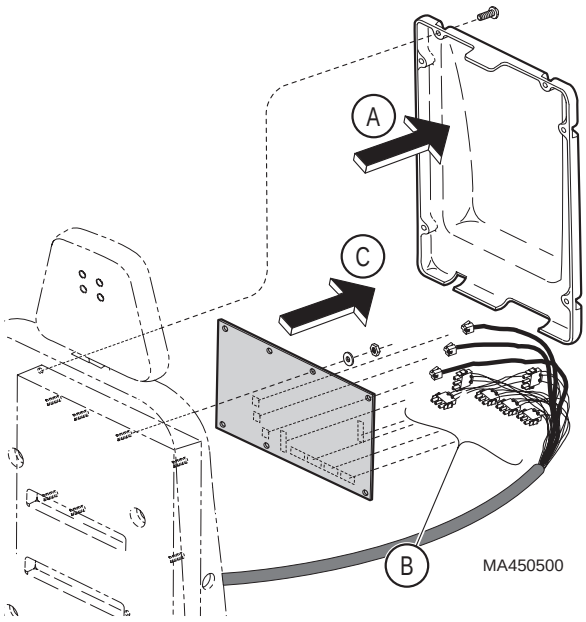

A. Remove back cover.
B. Place identification tags then disconnect wire harnesses from PC control board.
C. Remove PC board.

Continued →

© Midmark Corporation - 1998

3

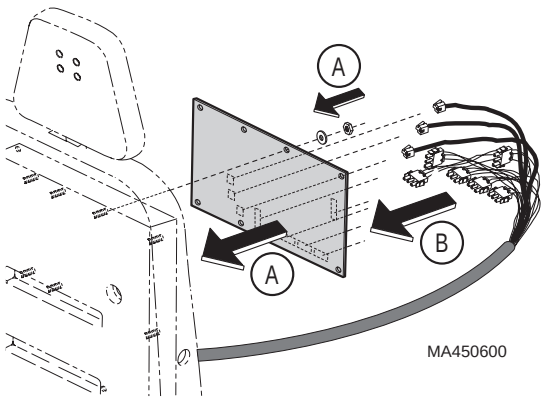

EQUIPMENT ALERT

To prevent board damage, always touch metal portion of chair to discharge any static charge from body before handling any PC board. Hold PC board by outer edges and do not touch components.

A. Carefully remove new PC board from protective bag, place in position on chair, and secure with washers and nuts.

NOTE

Table may have one, two or three cord sets depending on unit, right and/or left side hand control and/or foot control port. Port location numbers are J7, J9, J10. Assure cord(s) are inserted in same port location from where they were removed.

B. Connect wire harnesses to correct locations on PC board.

4

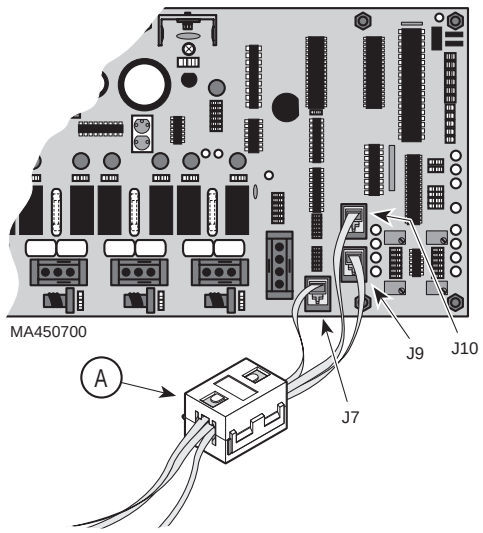

A. Position cord set(s) in hollow portion of suppression core then; carefully close and press until core latches.

5

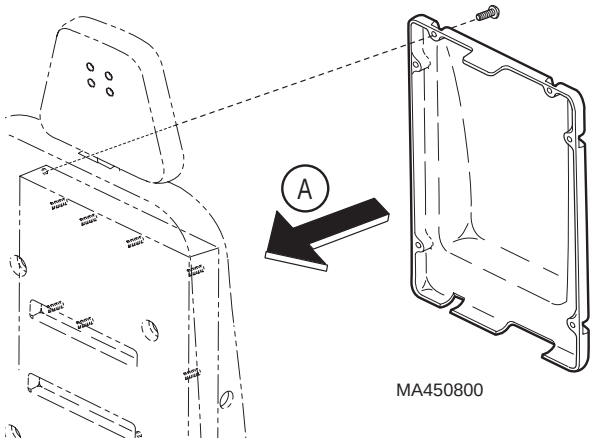

A. Install back cover, plug table into wall outlet and check operation.

© Midmark Corporation - 1998